
MUSICAL FIDELITY

ASSEMBLY INSTRUCTIONS
Nu-Vista Rack

Dear music lover,

Thank you for purchasing a Musical Fidelity Hi-Fi rack.

The following information is intended to ensure the precise assembly and setup of the Musical Fidelity Nu-Vista rack. Before starting the assembly, make sure you have enough space around you. Assemble the rack in the location where you plan to use it. Moving it after assembly is not recommended due to its heavy weight.

It is mandatory to handle large components with two people!

Your Nu-Vista rack is packaged in a total of 8 boxes. Four of these contain the rack's pillars and legs, while the remaining four hold the wooden shelves finished in piano black lacquer.

Box 1:

- 6pcs of bottom cups without thread
- 6pcs of height adjustable conical feet
- 6pcs of threaded cups
- Special tool for levelling

Box 2 (2x):

- 6pcs of threaded cups
- 6pcs of pillars

Box 3:

- 6pcs of top cups
- 6pcs of pillars

Box 4 (3x):

- 1 pc of wooden shelf (ground floor, first floor, second floor)

Box 5:

- 1 pc of wooden shelf (top floor)

Assembly instructions:

In **Box 1**, you will find 6 bottom cups, which serve as pads for the lower spike feet. These cups have no threads and are placed at the edge of the box. Remove them and place them at the location where the assembled Hi-Fi rack will stand.

In **Box 1**, you will also find 2 pairs of cotton gloves that should be worn during assembly, as well as a special tool (wrench) designed to help level the Hi-Fi rack.


In **Box 4** (you have a total of 3 of these boxes), you will find a wooden shelf for the rack. Remove the first shelf from the box and insert all 6 conical spike feet from below through the shelf.



Then, tighten the feet using the threaded cups as shown on the picture below.



Once the first level is assembled, we recommend leveling the rack using the provided wrench. Simply screw the wrench into the leg (each leg has a thread) and, with the help of a spirit level (not included), adjust the Hi-Fi rack to the desired horizontal position

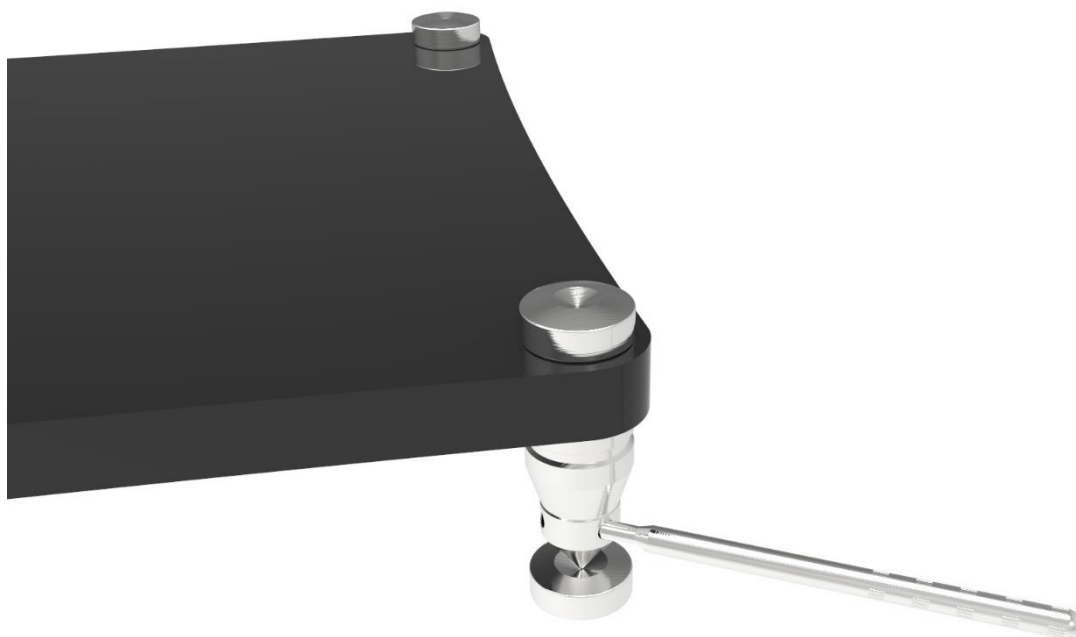

In **Box 2** (you have a total of 2 of these boxes), you will find a set of pillars for assembling the first intermediate level. The intermediate level must be assembled separately from the already assembled bottom level and then carefully lowered, with the spikes fitting into the cups of the bottom level.

Remove all 6 pillars from the box and insert them from below through the next wooden shelf.



Then, tighten the feet using the threaded cups as shown on the picture below.




Once the next level is prepared, carefully place it with the spikes into the cups of the first level.




Repeat this process to prepare the next level.



The cups for mounting the top wooden shelf differ from those used to connect the intermediate levels. The top shelf features specially recessed holes designed for these cups. Insert the cups into these recesses and tighten the final set of pillars. After securing, complete the assembly of the Hi-Fi rack by placing the top level into position.

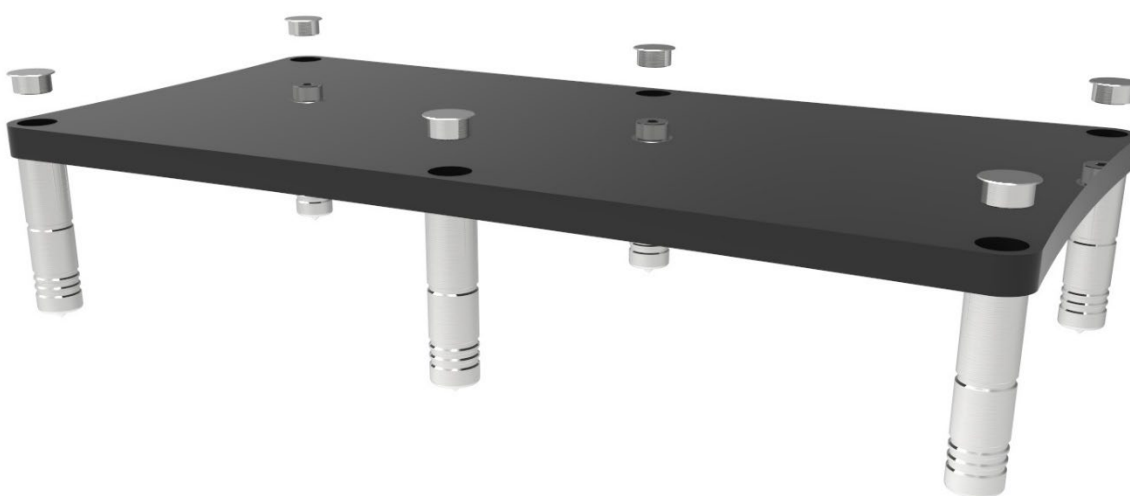

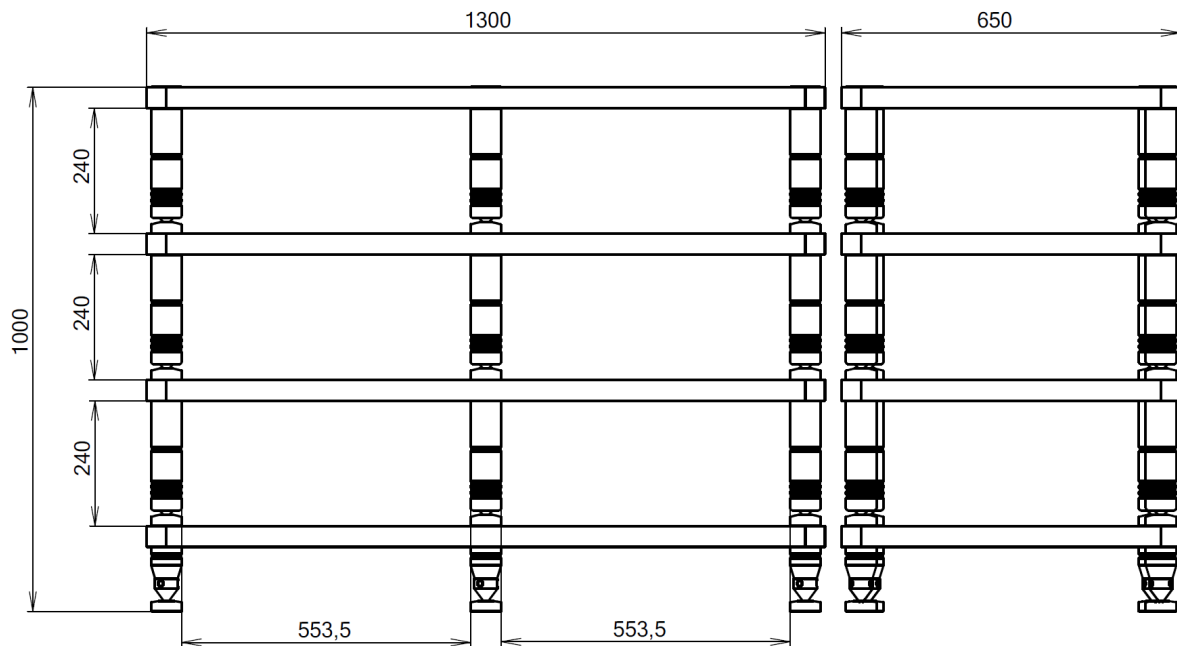

Warranty



The manufacturer accepts no responsibility for damage caused by not adhering to these instructions for use and/or by transportation without the original packaging. Modification or change to any part of the product by unauthorized persons, release the manufacturer from any liability over and above the lawful rights of the customer.

Musical Fidelity is a Registered Trademark of H. Lichtenegger.

This guide was produced by: Musical Fidelity Copyright © 2024. All rights reserved.

The information was correct at the time of going to press. The manufacturer reserves the right to make changes to the technical specification without prior notice as deemed necessary to uphold the ongoing process of technical development.